




ADAPTOR PLATES FOR TRANSMISSION JACKS

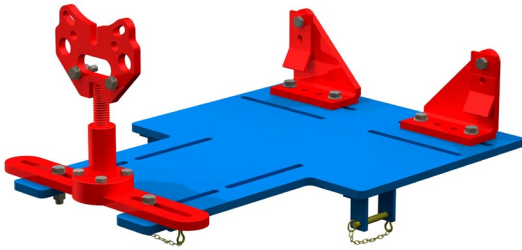


9512 Universal Adaptor Plate

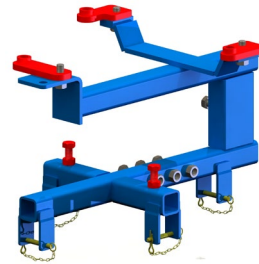


9513 DAF 75/85, X Member Adaptor

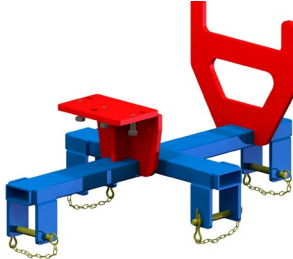


9514 Landrover Defender Adaptor

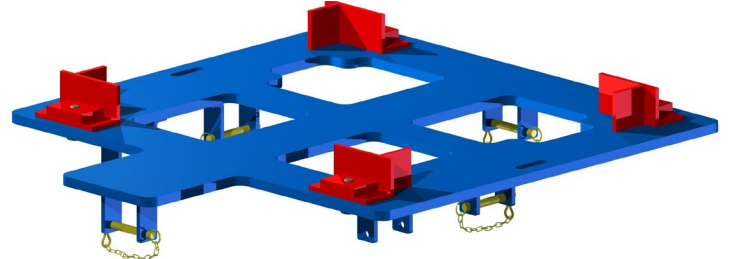


9516 Voith ZF Auto Bus Adaptor

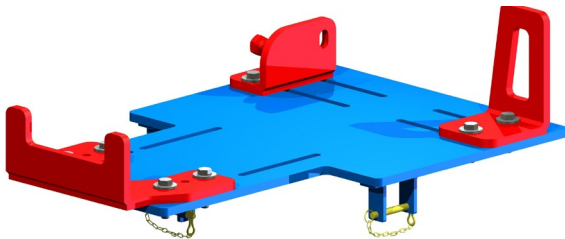


9517 Volvo FM7/FM12 Adaptor
9517A Converts 9512 to 9517

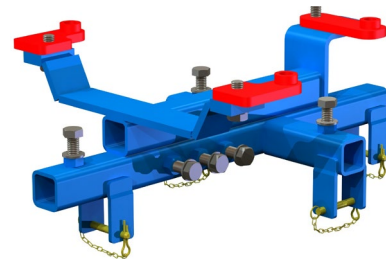


9521 ZF. Eco Lite/Mid/Split Adaptor

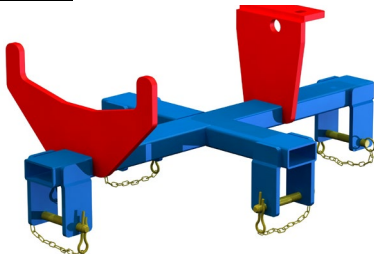


9522 Shogun Adaptor

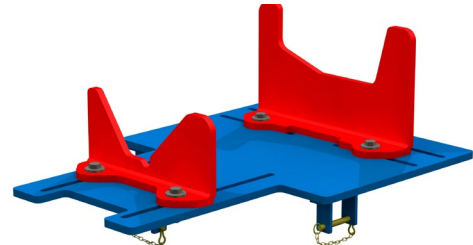


9523 Scania-Universal Adaptor
9523A Converts 9512 to 9523

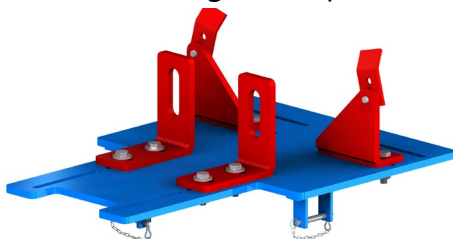

9524 Brake Hub Adaptor
9524A Converts 9512 to 9524

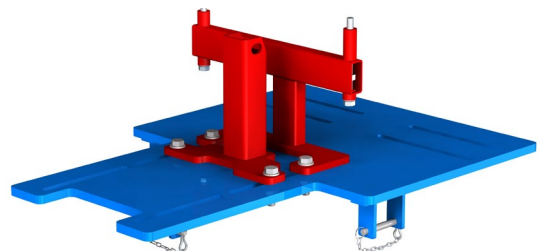

9525 New Scania (Post 2006)
9525A Converts 9512 to 9525

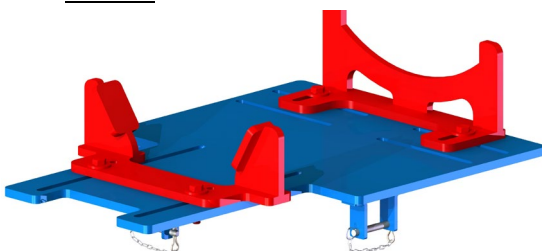


9526 ZF with Retarder
9526A Converts 9512 to 9526




9527 ZF i-Shift Adaptor
9527A Converts 9512 to 9527


ADAPTOR PLATES FOR TRANSMISSION JACKS

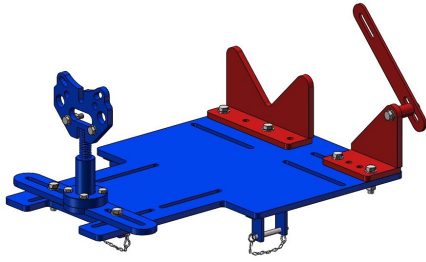


9529 Defender 6SP MT82 Adaptor
9529A Converts 9512 TO 9529

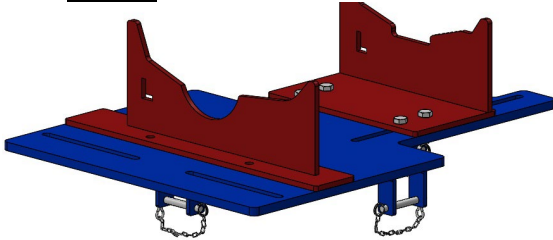


9532 Scania GRS905

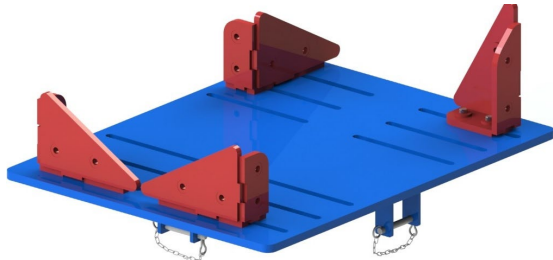

9612 Universal Adaptor MK2

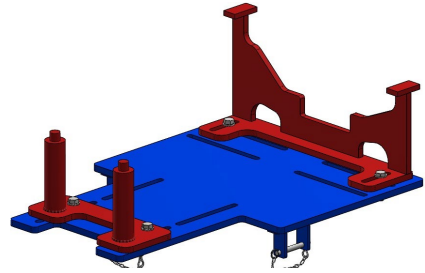

9530 ZF AS Tronic Adaptor
9530A Converts 9512 to 9530

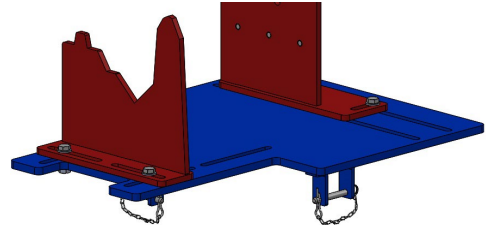

9533 ZF AS Tronic – Lite
9533A Converts 9512 to 9533